

1 Supporting documents

NOTICE

Read through the installation and operating instructions before installing or working with the product. The installation and operating instructions contain important notes for your personal safety. They must be read and understood by all persons who work with or handle the product during any phase of the product lifetime.

The documents listed below are available for download on our website www.zimmer-group.com:

- Installation and operating instructions
 - Catalogs, drawings, CAD data, performance data
 - Information on accessories
 - Technical data sheets
 - General Terms and Conditions (GTCs), including warranty information.
- ⇒ Only the documents currently available on the website are valid.

In these installation and operating instructions, "product" refers to the product designation.

2 Safety notices

CAUTION

Risk of injury and material damage in case of non-compliance

The product is state-of-the-art.

The following are examples of situations in which the product may cause a hazard:

- The product is not properly installed, used or maintained.
 - The product is not used for its designated purpose.
 - The locally applicable regulations, laws, directives or guidelines are not observed.
- ▶ The product may only be used in accordance with these installation and operating instructions and the product's technical data. Any changes or additions to the intended use of the product, as well as modifications to the product, such as those in the following examples, require the written permission of the manufacturer:
- Use of the product under extreme conditions, such as aggressive fluids or abrasive dusts
 - Additional drilled holes or threads
- ⇒ Zimmer Group GmbH accepts no liability for any damage caused by improper use. The operator bears sole responsibility.
- ▶ Whenever work is carried out on the product, make sure that the product cannot be actuated by mistake.
 - ▶ Make sure that there are no foreign objects in the operational range.
 - ▶ Observe the maintenance intervals.
 - ▶ When using the product under extreme conditions, adjust the maintenance interval according to the degree of soiling.

3 Proper use

NOTICE

The product is only to be used in its original state with its original accessories, with no unauthorized changes and within the stipulated parameter limits and operating conditions.

- Any other or secondary use is deemed improper.
- ▶ Operate the product only in compliance with the associated installation and operating instructions.
 - ▶ Operate the product only when it is in a technical condition that corresponds to the guaranteed parameters and operating conditions.
- ⇒ Zimmer Group GmbH accepts no liability for any damage caused by improper use. The operator bears sole responsibility.

INFORMATION

In accordance with EN ISO 13849-1, the product is a proven component of a control system. The product can thus be classified as control category B and control category 1 in accordance with DIN EN ISO 13849-1. With a test channel, the product can thus be classified as control category 2 in accordance with DIN EN ISO 13849-1. Multi-channel control ensures a high degree of diagnostic coverage. The product can thus be classified as control category 3 or higher in accordance with DIN EN ISO 13849-1.

- The clamping process may only be carried out in a static state.
- The product is designed exclusively for operation with hydraulic oil.
- The product may only be used on the profile rail guides specified by Zimmer Group GmbH.
- The product is designed for force absorption on linearly moving machine products.
- The product does not feature any guide characteristics.
 - ⇒ Guidance must be performed externally.
- The product is designed for cycle times higher than 100 ms.
- The product may only be used in the following situations with additional protection and/or control engineering measures:
 - In equipment used to transport persons (e.g. elevators)
 - In vehicles
 - Underwater or in other fluids
 - In corrosive environments (e.g. in connection with acids)
 - In contact with abrasive media (e.g. grinding dust)
 - In a vacuum
 - In direct contact with food
 - In areas with an explosive atmosphere

4 Personnel qualification

WARNING

Inadequate qualification can cause injury and material damage

If inadequately qualified personnel perform work on the product, this can cause serious injuries and significant material damage.


- ▶ All work on the product must be performed by qualified personnel.
- ▶ Before working with the product, read the document in its entirety and make sure that you have understood everything.
- ▶ Observe country-specific accident prevention regulations and the general safety notices.

5 Product description

Products in the series KWH are used for clamping on profile rail guides. The product is opened when de-energized. The running surface of the guide rail is not damaged by the product. The product is set to the respective rail dimension by the manufacturer.

In clean environments, the product can also be used without a wiper.

- 1 Wiper
- 2 Spacer plate (optional)
- 3 Hydraulic connection (B)

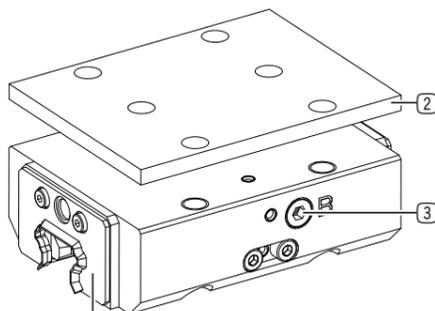

6 Functional description

The clamping force is generated by hydraulic pressure and transmitted to the guide rail via pistons. If hydraulic pressure is applied to the product, it closes.



Installation and operating instructions Series KWH

Am Glockenloch 2
77866 Rheinau, Germany
+49 7844 9138 0
info@zimmer-group.com
www.zimmer-group.com

DDOC0010
Index f
EN / 2025-12-09

7 Technical data

B10d value [cycles]	10 million
---------------------	------------

INFORMATION

- ▶ You can find the information in the technical data sheet on our website. This data varies within the series, depending on the specific design.

INFORMATION

- ▶ The holding force corresponds to the maximum force to which the product may be loaded. Due to the stiffness of the product, there may also be some offset below the holding force.
- ▶ If the application has specific requirements regarding stiffness, reduce the holding force until it reaches the required accuracy.

8 Accessories/scope of delivery

INFORMATION

- ▶ If any accessories not sold or authorized by Zimmer Group GmbH are used, the function of the product cannot be guaranteed. The accessories from Zimmer Group GmbH are specifically tailored to the individual products.
- The mounting screws are not included in the scope of delivery.
- A spacer plate is required depending on the height of the rail carriage.
- ▶ For further information on optional accessories and those included in the scope of delivery, refer to our website.

9 Transportation/storage/preservation

NOTICE

Material damage in case of non-compliance

- ▶ The product may be damaged if the clamping process is triggered without the guide rail or a transport lock between the clamping jaws.
- ▶ Only disconnect the product from the power supply when the guide rail or a transport lock is between the clamping jaws.

- ▶ Transport and store the product only in the original packaging.
- ▶ During transport, make sure that no uncontrolled movements can occur if the product is already mounted on the higher-level machine unit.
 - ▶ Prior to commissioning and after transport, check all power and communication connections as well as all mechanical connections.
- ▶ Observe the following points when storing the product for longer periods of time:
 - ▶ Keep the storage location as dust-free and dry as possible.
 - ▶ Avoid temperature fluctuations.
 - ▶ Avoid wind, drafts and formation of condensation.
 - ▶ Avoid direct sunlight.
- ▶ Clean all components until all contamination has been removed.
- ▶ Visually inspect all components.
- ▶ Remove potential corrosion spots properly.
- ▶ Close off unused connections using pressure-resistant closures.

10 Installation

WARNING



Risk of injury due to uncontrolled movement

- ▶ Risk of injury in case of uncontrolled movements of the machine or system into which the product is to be installed.
- ▶ Switch off the energy supply of the machine before all work.
- ▶ Secure the energy supply against being switched on unintentionally.
- ▶ Check the machine for any residual energy that may be present.

CAUTION



Risk of injury and material damage in case of non-compliance

- ▶ If the mounting screws are tightened when not clamped, the product can shift and possibly be unable to achieve the optimum clamping force. The guide rail can also be damaged.
- ⇒ The product cannot fulfill its safety function.
- ▶ Only tighten the mounting screws when clamped.

NOTICE



General installation instructions

- ▶ Install the product on an appropriate mounting surface in accordance with the flatness specifications.
- ▶ Make sure that the mounting piece is sufficiently rigid.
- ▶ Ensure the cleanliness of the connection surfaces.
- ▶ Observe the minimum screw-in depth of the mounting screws of 0.9 x Ø.
- ▶ Verify the permitted load capacity of the required screw connections in accordance with VDI 2230.

NOTICE



Material damage in case of non-compliance

- ▶ Improperly filled hydraulic systems can cause destruction of the product due to undissolved air in the hydraulic medium.
- ▶ Only use properly filled hydraulic systems. Applying pressure without a guide rail can result in material damage to the product.
- ▶ Only apply pressure to the product when it is installed.
- ▶ The use of incompatible hydraulic oil can lead to malfunctions. The product is filled with HLP 46 hydraulic oil by the manufacturer.
- ▶ Only use hydraulic oils that are miscible with HLP 46.


Assembly requirements

Permissible flatness tolerance [mm]	0.03
Permissible spotface roughness for the O-ring and cutting ring [mm]	Ra 1.6
Strength class of the mounting screws	≥ 8.8

10.1 Aligning the product

10.1.1 Aligning the product with a stop edge


- ▶ Align the product on the stop edge of the mounting piece.
- ▶ Mount the product on the mounting piece with the mounting screws.
- ▶ If the product has wipers, loosen the mounting screws of the wipers.
- ▶ Slide the mounting piece onto the guide rail.
- ▶ Continue with section „10.2 Produkt montieren“.

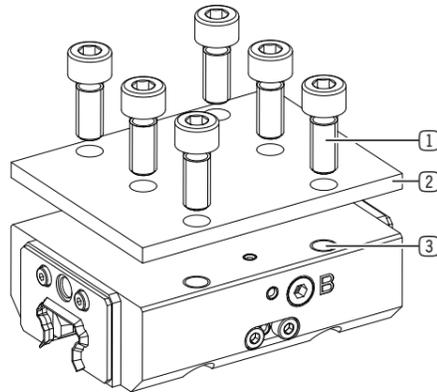

- ① Mounting screw
- ② Spacer plate (optional)
- ③ Installation thread

10.1.2 Aligning the product without a stop edge

- ▶ If the product has wipers, loosen the mounting screws of the wipers.
- ▶ Slide the product together with the rail carriage onto the guide rail.
- ▶ Install the mounting piece.
 - ▶ Loosely attach the mounting screws.
 - ▶ Make sure that the product lies on the mounting piece.
- ▶ Check the distance between the contact profile and the guide rail on both sides using a feeler gauge of 0.05 mm.
 - ⇒ The feeler gauge must be immersed on both sides.
 - ▶ If the feeler gauge is not immersed on both sides, realign the product.
 - ▶ When the feeler gauge is immersed on both sides, mount the product to the mounting piece using the mounting screws.

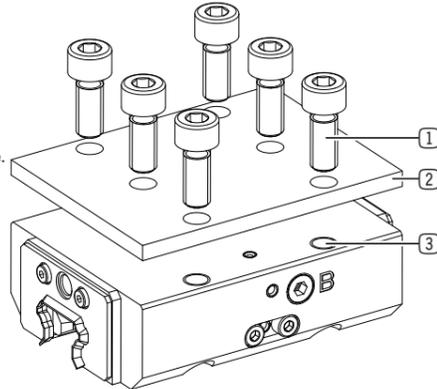


- ① Mounting screw
- ② Spacer plate (optional)
- ③ Installation thread

10.2 Installing the product

INFORMATION

- ▶ The product has alternative connections. Only one connection is required for the product to function safely.
 - ▶ Close off unused connections using pressure-resistant closures.

- ▶ Tighten the mounting screws of the wipers.
- ▶ Remove the cap from one of the hydraulic connections B.
- ▶ Install the hydraulic connection in one of the hydraulic connections B.
- ▶ Fill the hydraulic line.
- ▶ Connect the hydraulic line to the hydraulic connection.
- ▶ Bleed the system.
 - ▶ Release the sealing plug on the opposite side of the hydraulic connection.
 - ▶ Release the hydraulic connection.
 - ▶ Fill the hydraulic system until oil comes escapes from both connections.
 - ▶ Close the sealing plugs.
 - ▶ Tighten the hydraulic connection.
 - ▶ Wipe off excess oil with a lint-free cloth.
 - ▶ Make sure that there is no oil on the guide rail.

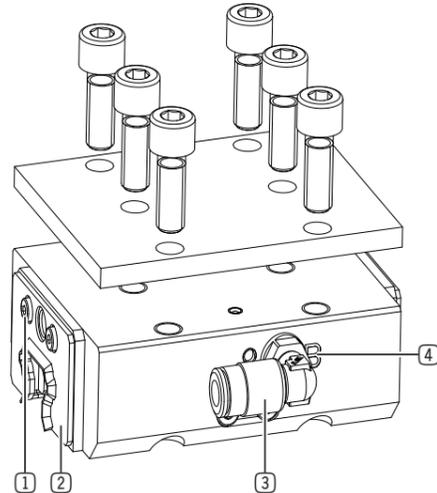

- ① Mounting screw
- ② Wiper
- ③ Hydraulic connection
- ④ Hydraulic connection (B)

10.3 Removing the product

- ▶ Carry out disassembly in reverse order.

11 Commissioning

WARNING

- ▶ **Risk of injury due to uncontrolled movement**
An emergency stop of the complete machine and the accompanying emergency braking of the product can lead to a decrease of the holding force. The malfunction resulting from this can lead to injuries.
 - ▶ After an emergency stop, check the operational readiness of the product.
 - ▶ Depressurize the product.
 - ▶ Initiate a force that is not greater than the maximum holding force of the product.
 - ▶ Make sure that the mounting piece does not move in this status.
 - ⇒ If the mounting piece moves, the holding force is no longer available.
 - ▶ Do not put the product into operation again until the operational readiness has been checked successfully.

11.1 Checking operational readiness

- ▶ Check the product and all connections for visible and audible leaks.
- ▶ Check all mounting screws for the prescribed tightening torque.
- ▶ Check whether the mounting piece can be moved easily when the product is open.
- ▶ Check whether the mounting piece cannot be moved up to the defined holding force or holding torque when the product is closed.
 - ▶ Make sure that the permitted holding force is not exceeded.
 - ▶ Observe the associated data sheet on our website.
 - ▶ Make sure that the weight force of the mounting piece is added to the test force for vertical applications.
 - ⇒ The test force to be applied is lower than in horizontal applications.
- ▶ If one of the checks is negative, please contact Customer Service.



Installation and operating instructions Series KWH
 Am Glockenloch 2
 77866 Rheinau, Germany
 +49 7844 9138 0
 info@zimmer-group.com
 www.zimmer-group.com
 DDOC00010
 Index f
 EN / 2025-12-09

12 Error diagnosis

INFORMATION

- ▶ An overview of possible malfunctions and their remedies can be found on our website.
 - www.zimmer-group.com/de/it-faq
- ▶ Please contact Customer Service if you have any questions.

13 Maintenance

NOTICE

- ▶ **Material damage caused by unsuitable cleaning materials**
Seals, insulation, coatings and other surfaces may be damaged by solvent-based cleaning agents.
 - ▶ Make sure that no liquids penetrate the product.
 - ▶ Use chemically and biologically neutral cleaning agents.

The product is maintenance-free during the listed service life.

The maintenance interval may be shortened under the following circumstances:

- Dirty environment
- Operation with unauthorized hydraulic oil
- Permissible temperature range not observed
- Improper use and use that does not comply with the performance data
- ▶ Despite the maintenance-free performance mentioned, visually check the product regularly for damage and dirt.
 - ▶ Perform an annual visual inspection of the wipers.
- ⇒ Dismantling and reassembling the product without authorization may result in complications, as special installation equipment is required in some cases. Zimmer Group GmbH accepts no liability for any resulting malfunctions or damage.

14 Decommissioning/disposal

INFORMATION

- ▶ When the product reaches the end of its operational phase, it can be completely disassembled and disposed of.
 - ▶ Disconnect the product completely from the power supply.
 - ▶ Dispose of the components properly according to the material groups.
 - ▶ Comply with the locally applicable environmental and disposal regulations.

15 Declaration of Incorporation

In terms of the Machinery Directive 2006/42/EC (Annex II 1 B)

Name and address of the manufacturer:

Zimmer Group GmbH, Am Glockenloch 2, 77866 Rheinau, Germany, +49 7844 9138 0, www.zimmer-group.com

We hereby declare that the incomplete machine described below

Product designation: Clamping element, hydraulic
Series designation: KWH

conform to the requirements of the Machinery Directive 2006/42/EC, Article 2g, Annex VII, b – Annex II, b in its design and the version we put on the market.

Basic health and safety requirements:

No. 1.1.2, No. 1.1.3, No. 1.1.5, No. 1.3.2, No. 1.3.4, No. 1.3.7, No. 1.5.3, No. 1.5.4, No. 1.5.8, No. 1.6.4, No. 1.7.1, No. 1.7.4
 The following harmonized standards have been used:

DIN EN ISO 12100:2011-03 Safety of machinery – General principles – Risk assessment and risk reduction
 DIN EN ISO 13849-1/-2 Safety of machinery – Safety-related parts of control systems
 DIN EN ISO 4413 Safety-related requirements for hydraulic systems and their components

A full list of applied standards can be obtained from the manufacturer.

Michael Hemler Rheinau, Germany, 2018-07-18
 Authorized representative for compiling the relevant technical document (Place and date of issue)

Martin Zimmer
 Martin Zimmer
 (Legally binding signature)
 Managing Partner