

1 Supporting documents

NOTICE



Read through the installation and operating instructions before installing or working with the product. The installation and operating instructions contain important notes for your personal safety. They must be read and understood by all persons who work with or handle the product during any phase of the product lifetime.



The documents listed below are available for download on our website www.zimmer-group.com:

- Installation and operating instructions
 - Catalogs, drawings, CAD data, performance data
 - Information on accessories
 - Technical data sheets
 - General Terms and Conditions (GTCs), including warranty information.
- ⇒ Only the documents currently available on the website are valid.

In these installation and operating instructions, "product" refers to the product designation.

2 Safety notices

CAUTION



Risk of injury and material damage in case of non-compliance

The product is state-of-the-art.

The following are examples of situations in which the product may cause a hazard:

- The product is not properly installed, used or maintained.
- The product is not used for its designated purpose.
- The locally applicable regulations, laws, directives or guidelines are not observed.
- ▶ The product may only be used in accordance with these installation and operating instructions and the product's technical data. Any changes or additions to the intended use of the product, as well as modifications to the product, such as those in the following examples, require the written permission of the manufacturer:
 - Use of the product under extreme conditions, such as aggressive fluids or abrasive dusts
 - Additional drilled holes or threads
- ⇒ Zimmer Group GmbH accepts no liability for any damage caused by improper use. The operator bears sole responsibility.
- ▶ Whenever work is carried out on the product, make sure that the product cannot be actuated by mistake.
- ▶ Make sure that there are no foreign objects in the operational range.
- ▶ Observe the maintenance intervals.
- ▶ When using the product under extreme conditions, adjust the maintenance interval according to the degree of soiling.

3 Proper use

NOTICE



The product is only to be used in its original state with its original accessories, with no unauthorized changes and within the stipulated parameter limits and operating conditions.

Any other or secondary use is deemed improper.

- ▶ Operate the product only in compliance with the associated installation and operating instructions.
- ▶ Operate the product only when it is in a technical condition that corresponds to the guaranteed parameters and operating conditions.
- ⇒ Zimmer Group GmbH accepts no liability for any damage caused by improper use. The operator bears sole responsibility.

- The clamping process may only be carried out in a static state.
- Series HK/miniHK products may only be used on the profile rail guides specified by Zimmer Group GmbH.
- Products in the series HKR may only be used on round rods.
- The product is designed for force absorption on linearly moving machine products.
- The product does not feature any guide characteristics.
 - ⇒ Guidance must be performed externally.
- The product is not designed for securing suspended loads.
- The product may only be used in the following situations with additional protection and/or control engineering measures:
 - In equipment used to transport persons (e.g. elevators)
 - In vehicles
 - Underwater or in other fluids
 - In corrosive environments (e.g. in connection with acids)
 - In contact with abrasive media (e.g. grinding dust)
 - In a vacuum
 - In direct contact with food
 - In areas with an explosive atmosphere

4 Personnel qualification

WARNING



Inadequate qualification can cause injury and material damage

If inadequately qualified personnel perform work on the product, this can cause serious injuries and significant material damage.



- ▶ All work on the product must be performed by qualified personnel.
- ▶ Before working with the product, read the document in its entirety and make sure that you have understood everything.
- ▶ Observe country-specific accident prevention regulations and the general safety notices.

5 Product description

Products in the series HK/miniHK are used for clamping on profile rail guides. Products in the series HKR are used for clamping round rod guides.

The running surface of the guide rail (series miniHK/HK) and the round rod (series HKR) are not damaged by the product.

The product is set to the respective rail dimension by the manufacturer.

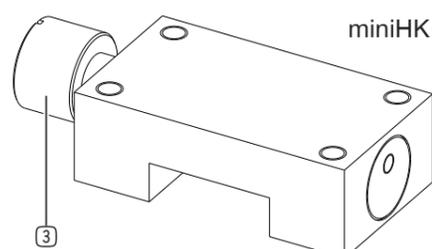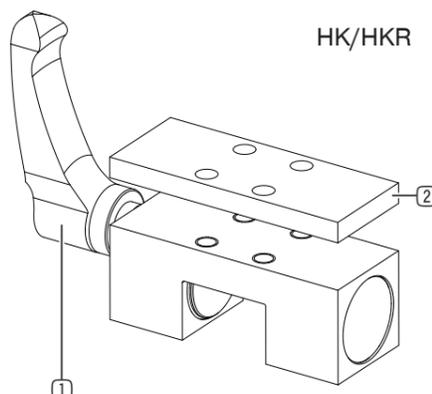


① Clamp lever

② Spacer plate (optional)

③ Knurled screw

6 Functional description

The clamping force is generated manually with a clamp lever or a knurled screw. Due to the floating contact profiles, the force is applied symmetrically. Products in the series miniHK and HK clamp onto the free surfaces of the guide rail.

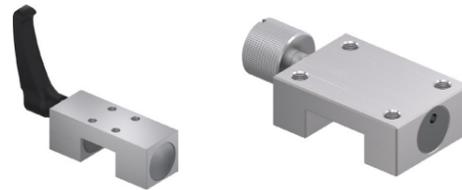

Installation and operating instructions
Series miniHK/HK/HKR

Im Salmenkopf 5
77866 Rheinau, Germany
+49 7844 9138 0
info@zimmer-group.com
www.zimmer-group.com

DDOC00070
Index h
EN / 2025-12-04

7 Technical data

INFORMATION



- ▶ You can find the information in the technical data sheet on our website.
- ▶ This data varies within the series, depending on the specific design.

INFORMATION



- ▶ The holding force corresponds to the maximum force to which the product may be loaded. Due to the stiffness of the product, there may also be some offset below the holding force.
- ▶ If the application has specific requirements regarding stiffness, reduce the holding force until it reaches the required accuracy.

8 Accessories/scope of delivery

INFORMATION



- ▶ If any accessories not sold or authorized by Zimmer Group GmbH are used, the function of the product cannot be guaranteed. The accessories from Zimmer Group GmbH are specifically tailored to the individual products.
- The mounting screws are not included in the scope of delivery.
- A spacer plate is required depending on the height of the rail carriage.
- ▶ For further information on optional accessories and those included in the scope of delivery, refer to our website.

9 Transportation/storage/preservation

- ▶ Transport and store the product only in the original packaging.
- ▶ During transport, make sure that no uncontrolled movements can occur if the product is already mounted on the higher-level machine unit.
 - ▶ Before commissioning and after transporting the product, check all mechanical connections.
- ▶ Observe the following points when storing the product for longer periods of time:
 - ▶ Keep the storage location as dust-free and dry as possible.
 - ▶ Avoid temperature fluctuations.
 - ▶ Avoid wind, drafts and formation of condensation.
 - ▶ Avoid direct sunlight.
- ▶ Clean all components until all contamination has been removed.
- ▶ Visually inspect all components.
- ▶ Remove potential corrosion spots properly.

10 Installation

WARNING



Risk of injury due to uncontrolled movement

- ▶ Risk of injury in case of uncontrolled movements of the machine or system into which the product is to be installed.
- ▶ Switch off the energy supply of the machine before all work.
- ▶ Secure the energy supply against being switched on unintentionally.
- ▶ Check the machine for any residual energy that may be present.

NOTICE



General installation instructions

- ▶ Install the product on an appropriate mounting surface in accordance with the flatness specifications.
- ▶ Make sure that the mounting piece is sufficiently rigid.
- ▶ Ensure the cleanliness of the connection surfaces.
- ▶ Observe the minimum screw-in depth of the mounting screws of 0.9 x Ø.
- ▶ Verify the permitted load capacity of the required screw connections in accordance with VDI 2230.

Assembly requirements

Permissible flatness tolerance [mm]	0.03
Strength class of the mounting screws	≥ 8.8
Tolerance class of the round rod (HKR)	f8, g8, h7
Permissible roundness tolerance of the round rod (HKR)	0.5 x tolerance class
Surface of the round rod (HKR)	Ra 0.2 - 3.2
Minimum yield strength of the round rod (HKR) [N/mm ²]	400
Hardness option 1 case hardening (HKR)	Min. 54 HRC, min. 0.5 mm hardening depth
Hardness option 2 hard chrome plating (HKR)	Min. 800 HV, min. 20 µm layer thickness

10.1 Installing the product


- ▶ Clean the guide rail/round rod.
- ▶ Push the product onto the guide rail/round rod.
- ▶ If you are using a spacer plate as height compensation, position the spacer plate on the housing of the product.
- ▶ Loosely attach the mounting screws.
 - ▶ Make sure that the product lies on the mounting piece.
- ▶ Actuate the clamp lever/knurled screw.
- ⇒ The product clamps the guide rail/round rod.
- ▶ Tighten the mounting screws without tension when clamped.

① Clamp lever

② Installation thread

③ Mounting screw

④ Spacer plate (optional)

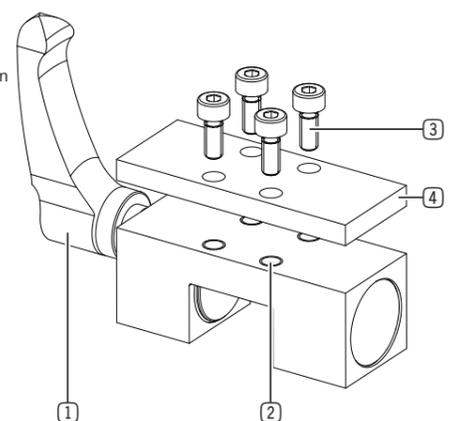


10.2 Removing the product

- ▶ Carry out disassembly in reverse order.

11 Commissioning

11.1 Checking operational readiness

- ▶ Check all mounting screws for the prescribed tightening torque.
- ▶ Check whether the mounting piece can be moved easily when the product is open.
- ▶ Check whether the mounting piece cannot be moved up to the defined holding force or holding torque when the product is closed.
 - ▶ Make sure that the permitted holding force is not exceeded.
 - ▶ Observe the associated data sheet on our website.
 - ▶ Make sure that the weight force of the mounting piece is added to the test force for vertical applications.
 - ⇒ The test force to be applied is lower than in horizontal applications.
- ▶ If one of the checks is negative, please contact Customer Service.

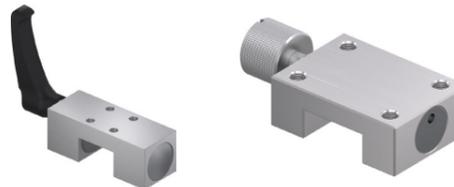

Installation and operating instructions
Series miniHK/HK/HKR

Im Salmenkopf 5
77866 Rheinau, Germany
+49 7844 9138 0
info@zimmer-group.com
www.zimmer-group.com

DDOC00070
Index h
EN / 2025-12-04

12 Error diagnosis

INFORMATION



- ▶ An overview of possible malfunctions and their remedies can be found on our website.
 - www.zimmer-group.com/de/it-faq
- ▶ Please contact Customer Service if you have any questions.

13 Maintenance

NOTICE



Material damage caused by unsuitable cleaning materials

- Seals, insulation, coatings and other surfaces may be damaged by solvent-based cleaning agents.
 - ▶ Make sure that no liquids penetrate the product.
 - ▶ Use chemically and biologically neutral cleaning agents.

The product is maintenance-free during the listed service life.

The maintenance interval may be shortened under the following circumstances:

- Dirty environment
- Permissible temperature range not observed
- Improper use and use that does not comply with the performance data
- ▶ Despite the maintenance-free performance mentioned, visually check the product regularly for damage and dirt.
- ⇒ Dismantling and reassembling the product without authorization may result in complications, as special installation equipment is required in some cases. Zimmer Group GmbH accepts no liability for any resulting malfunctions or damage.

14 Decommissioning/disposal

INFORMATION



- When the product reaches the end of its operational phase, it can be completely disassembled and disposed of.
 - ▶ Disconnect the product completely from the power supply.
 - ▶ Dispose of the components properly according to the material groups.
 - ▶ Comply with the locally applicable environmental and disposal regulations.

15 Declaration of Incorporation

In terms of the Machinery Directive 2006/42/EC (Annex II 1 B)

Name and address of the manufacturer:

Zimmer Group GmbH, Im Salmenkopf 5, 77866 Rheinau, Germany, +49 7844 9138 0, www.zimmer-group.com

We hereby declare that the incomplete machine described below

Product designation: Clamping element
Series designation: miniHK/HK/HKR

conform to the requirements of the Machinery Directive 2006/42/EC, Article 2g, Annex VII, b – Annex II, b in its design and the version we put on the market.

The following harmonized standards have been used:

DIN EN ISO 12100:2011-03	Safety of machinery – General principles – Risk assessment and risk reduction
DIN EN 894-3	Safety of machinery – Ergonomic requirements for the design of actuators
DIN EN 1005-3	Safety of machinery – Human force limits when operating machinery

A full list of applied standards can be obtained from the manufacturer.

Michael Hemler

Rheinau, Germany, 2018-07-18

Authorized representative for compiling the relevant technical document

(Place and date of issue)

Martin Zimmer
(Legally binding signature)
Managing Partner