AIR DAMPERS SERIES BAJO

► PRODUCT SPECIFICATIONS



Damper with a long service life that can be integrated with great versatility. Air friction technology for use in clean rooms without any problems.


► APPLICATION AREAS



SERIES CHARACTERISTICS

	Stroke Medium Operating direct		Operating direction
Series	[mm]		
Bajo	48.0	Air	Pressure dampers

TECHNICAL DRAWING

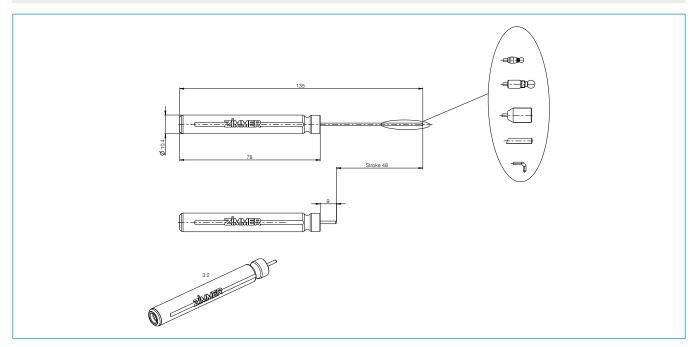


► TECHNICAL DATA

Order no.	A048-10-000	A048-10-009	A048-10-018
Mass to be braked [kg]	25.0	25.0	25.0
Damper Ø housing [mm]	10.4	10.4	10.4
Damper housing length [mm]	78.1	86.1	78.1
Damper Ø piston rod [mm]	1.5	3.0	1.5
Damper housing connection	Without connection	Without connection	Without connection
Damper piston rod connection	Ball head	Magnet head	Ball head
Free-run	Yes	Yes	Yes
Free-run length [mm]	5.0	5.0	5.0
Damper reversal point [mm]	21.0	25.0	21.0
Damper reversal point tolerance [mm]	+4/-3	+5/-4	+4/-3
Damper closing time [s]	1.0	1.3	1.0
Damper closing time tolerance [s]	+0.3/-0.2	+0.5/-0.5	+0.3/-0.2
Damper housing color	Beige RAL1001	Gray RAL7016	Gray RAL7016
Damper cover color	Gray RAL7035	Gray RAL7035	Gray RAL7035

INDIVIDUAL DAMPERS AIR FRICTION DAMPERS

PRINCIPLE OF FUNCTION

- In a sealed housing there is a piston which is moving back- and forward. By means of the pressure-difference which results within the closing-movement the sealing-lip will be pressed against the breaking-collar. This breaking-collar expand and presses the cylinder in which it moves. Thus the friction-energy is generated.
- No oil-leakage possible
- Friction force is reated to the pressure

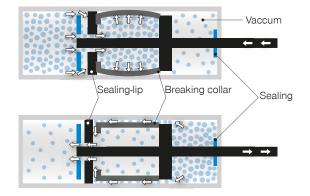

DAMPER WITH AND WHITOUT RESET-FUNCTION

Damper **without** reset-function needs a coupler onto the pistonrod is needed to be used within the fitting. The pistonrod do not extract by itself, it has to be extracted manually.




Damper **with** a integrated reset-function a Coupler is not needed onto the pistonrod within the fitting. The pistonrod will be extracted automatically.



GRAPH AIR FRICTION DAMPER IN SELF-CLOSING UNITS

Characteristic curve air friction damper

Phase 1 : sharp breakage Phase 2 : short stop,returning point Phase 3 : dampened moving-in Phase 4 : unit closed

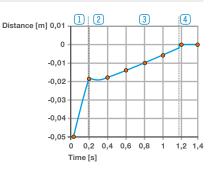

PRODUCT RANGE AIR-FRICTION DAMPER

- Housing length (I): 56 mm bis
 164 mm
- Housing diameter (d): 9 mm bis 16,6 mm
- Stroke (s): 19 mm bis 110 mm

